

TLR Remote Switch Adapter Installation


The existing door must be removed from the TLR before the remote switch adapter can be installed.

Removal

The door must be in the closed and locked position.

There are two molded bumps on either side of the door hinge pin and the right-hand bump is noticeably larger than the left-hand one.

Use needle-nose pliers or similar tool to start pushing the door hinge pin through the door hinge. (Away from the larger molded bump.)

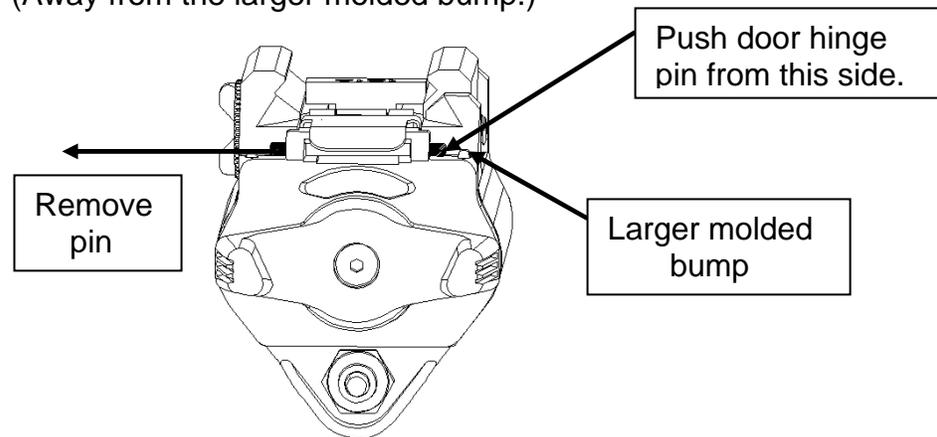

When enough of the door hinge pin becomes exposed it can be removed by grasping it with the pliers (slightly lift the pin upwards to clear the smaller molded bump) and sliding it free.

Retain the door hinge pin.

Open the latch and remove the standard door.

Installation

Place the remote switch adapter on the TLR and latch it in place.

Align the door hinge pin with the holes in the TLR body and push the pin in until there is some resistance.

Use needle nose pliers to push the pin until it fully seats.